


Metalwork by others, fabricated and installed to SMACNA standards (minimum fastening requirements shown below), must be installed in conjunction with a continuous metal cleat, securing fascia tightly to face of building in order to prevent or mitigate potential wind damage.

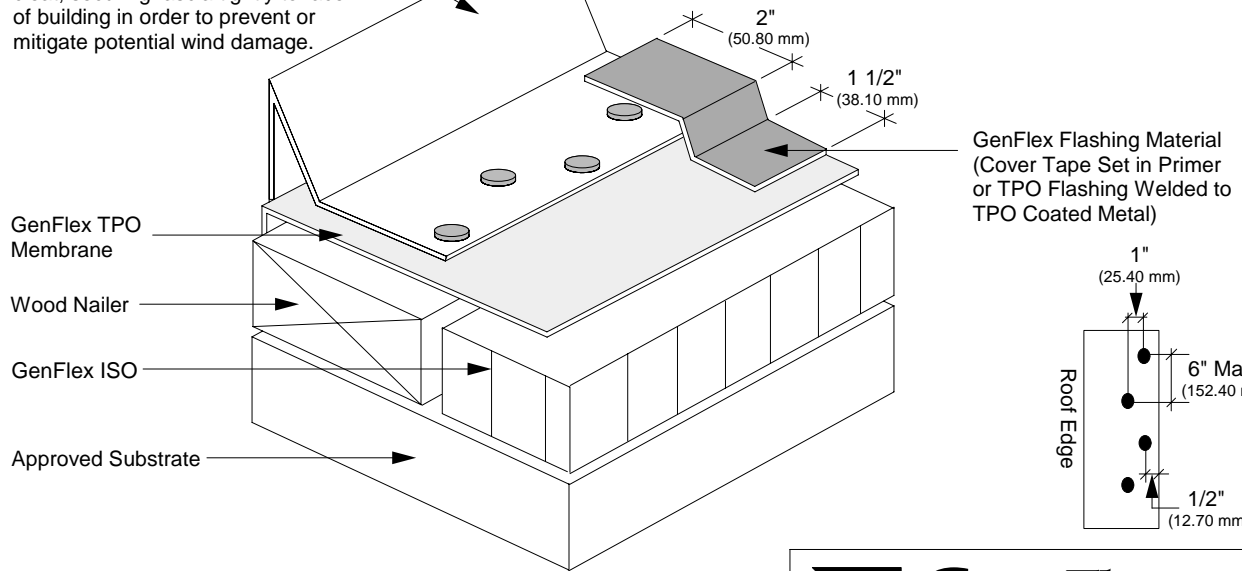

**Gravel Stop / Drip Edge
Securement Pattern**

**Detail #: T-1.09
(T-14.12)**

TPO Systems