


Product Data Sheet

GENFLEX PEEL & STICK™ YELLOW SAFETY STRIP



Description

GenFlex Peel & Stick™ Yellow Safety Strip consists of a white cured tape adhesive that is laminated to a yellow thermoplastic cover strip. GenFlex Peel & Stick™ Yellow Safety Strip is used for designating a safety perimeter around the roof edge, equipment and any other rooftop hazards, on all GenFlex membranes.

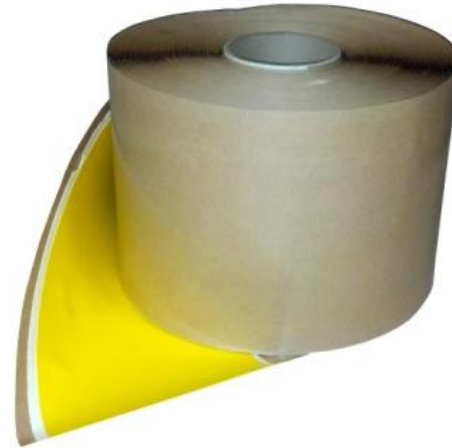

Physical Properties - Tape

PROPERTY	TYPICAL VALUES
Base	Rubber Polymer
Color	White
Solids	100%
Specific Gravity	0.98 ± 0.02 (H ₂ O=1)
Cure State	Cured
Width	5 ¾" - 0, + 1/16" (146 mm - 0 mm, + 1.65 mm)
Thickness	0.035" + 0.002", - 0.005" (0.889 mm + 0.051 mm, - 0.127 mm)
Length	100 Lineal Feet - 0, + 2' (30.5 m - 0, + 0.61 m)

Physical Properties - TPO

PROPERTY	TYPICAL VALUES
Base	TPO
Color	Yellow
Solids	100%
Specific Gravity	1.15 ± 0.05
Width	5 ½" + 0, - 1/8" (140 mm + 0 mm, - 3.18 mm)
Thickness	0.030" ± 10% (0.76 mm)
Length	100 Lineal Feet - 0, + 2' (30.5 m - 0, + 0.61 m)

Installation

GenFlex Clear Primer or Clear Primer LVOC must be applied with a scrub pad and handle when installing GenFlex Peel & Stick™ Yellow Safety Strip.

The application of the GenFlex Peel & Stick™ Yellow Safety Strip should be as follows:

1. All sources of ignition should be eliminated; adequate ventilation should exist.
2. Thoroughly mix GenFlex Clear Primer. **DO NOT THIN!** A minimum of 2 minutes of vigorous hand mixing with a wooden paint stirrer or its equivalent is required.
3. Clean all surfaces with a clean cotton rag, removing excess contamination prior to application of the primer.
4. With a scrub pad and handle, apply GenFlex Clear Primer to the GenFlex membrane and metal flange, using long and continuous back and forth strokes with heavy to moderate pressure along the bonding area until no streaks or puddling occurs.
5. Allow GenFlex Clear Primer to dry until slightly tacky to a dry finger touch.
6. Center the GenFlex Peel & Stick™ Yellow Safety Strip over the primed area, and remove the release paper from the tape. Apply the tape to the primed metal and/or GenFlex membrane.
7. Using a silicone coated rubber or steel hand roller, hand-roll the entire length of the tape into the primed surface, assuring adhesion.

Product Data Sheet

GENFLEX PEEL & STICK™ YELLOW SAFETY STRIP



Product Data

SIZE	CONTENTS	PRODUCT #
5 1/2" x 100' (139.7 mm x 30.5 m)	1 Roll of GenFlex Peel & Stick™ Yellow Safety Strip	W590020200 – Yellow

LEED Information

Recycled Content

Post Consumer	0%
Post Industrial	0%
Manufacturing Location	Michigan Center, MI

Storage

Store in original unopened container indoors at temperatures between 60 °F and 80 °F (16 °C and 27 °C). Do not store on roof in direct sunlight or at temperatures above 80 °F (27 °C). When exposed to lower temperatures, restore to room temperature prior to use.

Shelf Life

12 months; shelf life will be shortened if exposed to elevated temperatures.

Precautionary Data

Take care when moving, transporting, and handling, etc. to avoid sources of punctures and physical damage.

Contact GenFlex Roofing Systems Technical Department for specific recommendations.

Refer to Material Safety Data Sheet for additional information.