


GenFlex Bonding Adhesive
See Note #1

GenFlex Bar Anchor with Approved Fasteners
12" (304.80 mm) o.c.
Fastener Length Not to Exceed 6" (152.40 mm)

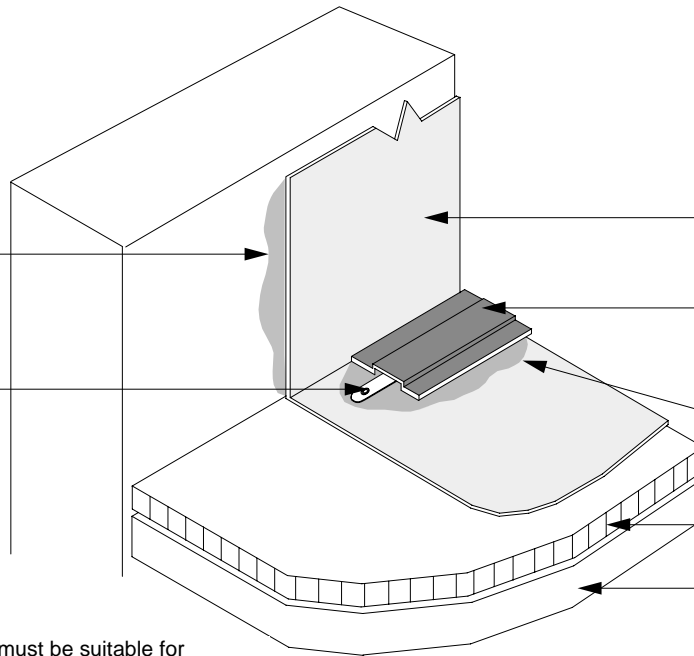

GenFlex EPDM Membrane
See Note #2

GenFlex 5" (127.00 mm) Bar Cover Tape
See Note #3

GenFlex Primer

GenFlex ISO

Approved Substrate

1. All parapet walls and roof curbs must be suitable for flashing, i.e. clean, tight, smooth, no cracks, etc.
2. When cured flashing is used on wall or curb flashing, vertical seams must be stripped-in at the base of angle change with a 6" (152.40 mm) strip of FlexFlash E, or 7" (177.80 mm) Peel & Stick. See Detail E-3.01.
3. When using GenFlex Seam Tape and GenFlex Bar Cover Tape, first clean the membrane with GenFlex Cleaner. Then apply GenFlex Primer.



**Continuous Membrane Base
Flashing - Horizontally Secured**

Detail #: E-2.04

EPDM Systems